




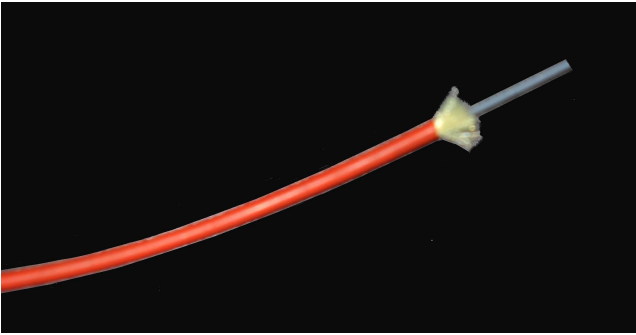

TECHNICAL INFORMATION - TECHNICAL INSTRUCTIONS FOR ASSEMBLY

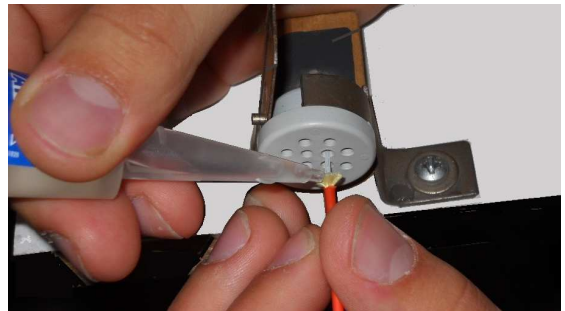



Prepare the protection cables of the suitable length, then unsheathe them, leaving out the sheath 20 mm tube and 3 or 4 mm kevlar.

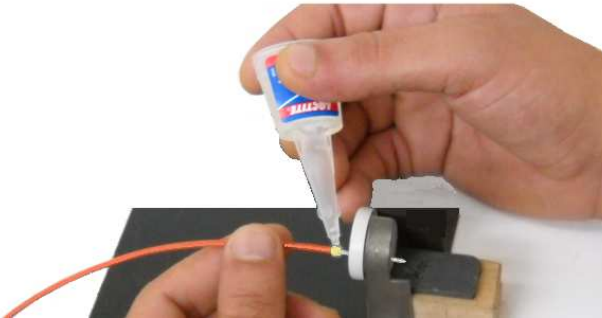


Thread the protection tube, stick a drop of glue on the kevlar, then push the sheath up to the end of the hole.

Cut the head edge with a blade while letting it run free (just to avoid the fibre protection getting oval).

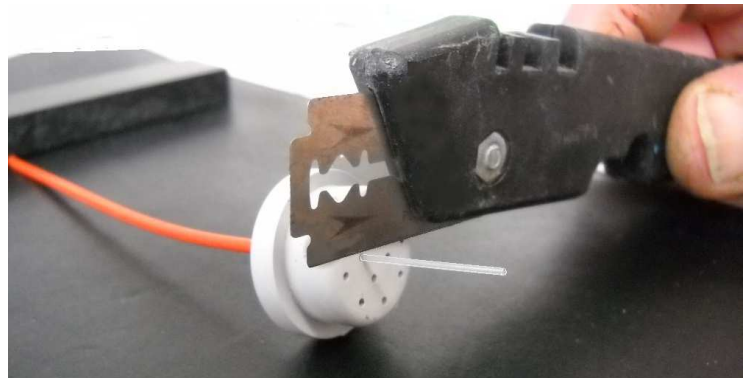


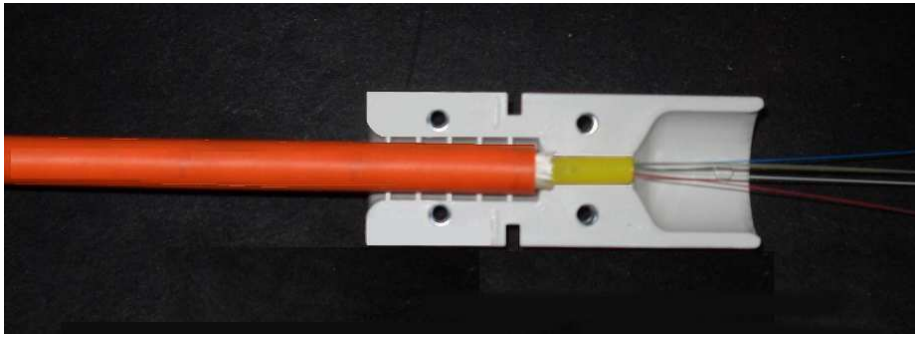


Unsheathe the cable and set the fibres free for the required length, remove the gel from the fibres using a detergent or hydropropylic alcohol.

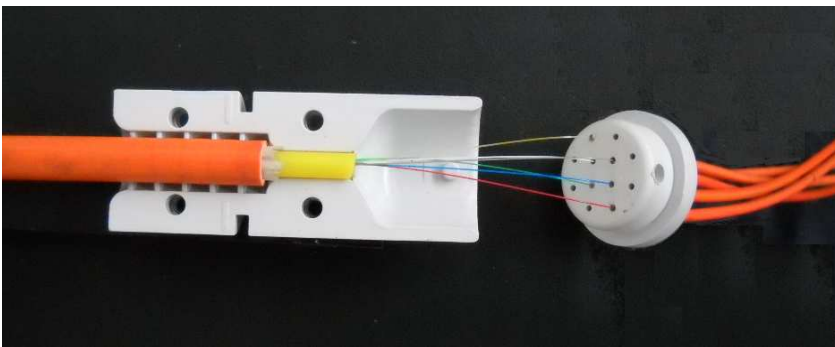

Introduce the fibres into the tubes pre-arranged on the head.

Set the head in position running it to the stop notches. Do not rotate or cross the fibres.

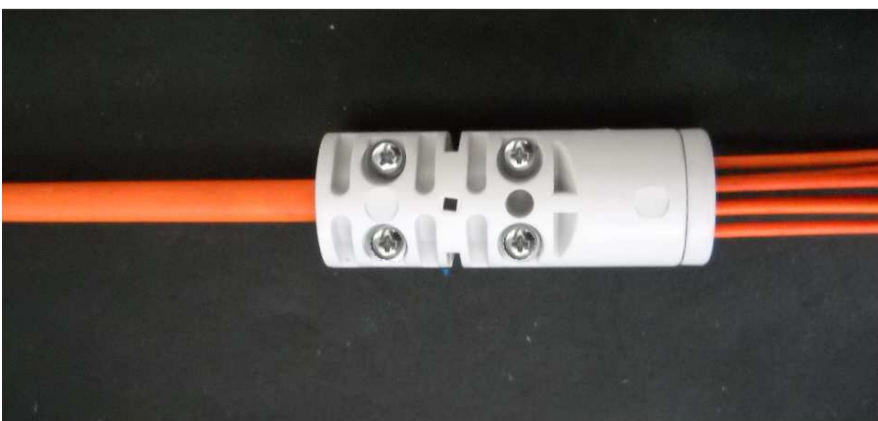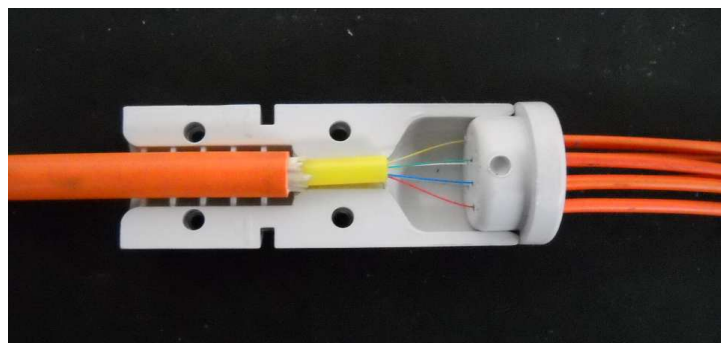

Set the half section in position and fix it with the screws.